

12.2.9 Configuration parameters

| Parameter name | Default settings | Value |
|----------------------------|------------------|--------------------------------------|
| Hold open time | 5s | 2s- 6h |
| Opening time | 4.5s | 4.5s - 9s |
| Closing time | 4.5s | 4.5s - 9s |
| Arm system | Push | Push / Pull |
| Push and go | Not active | Not active / Active |
| Power assist | Off | Off / Low / Medium / High |
| Extend closing torque | 0 (Lowest) | 0 (Lowest) - 10 (Highest) |
| Stop on stall | Active | Not active / Active |
| Select lock voltage | 12V | 12V / 24V |
| Select lock power | Lock with power | Lock with power / Lock without power |
| Push and close | Not active | Not active / Active |
| Key impulse hold open time | 5s | 2s - 25s |
| Number of lock retries | 1 time | 0 - 2 times |
| Lock kick | Not active | Not active / Active |
| Reverse upon obstruction | Active | Not active / Active |
| Lock release time | 0.5s | 0s- 5s |
| Ratchet function | Not active | Not active / Active |