



INSTALLATION INSTRUCTIONS

THE TIMER MODULE IS REQUIRED FOR INSTALLATIONS THAT HAVE AN ELECTROMECHANICAL LOCK LOCATED ON THE AUTOMATIC DOOR. THE LOCK WILL OPEN OR RELEASE BEFORE THE OPERATOR RECEIVES A SIGNAL TO OPEN THE DOOR.

A DOOR POSITION SWITCH IS ALSO REQUIRED FOR RECYCLE PURPOSES. THIS SWITCH IS TO BE LOCATED AT THE CLOSED POSITION. THIS ALLOWS THE LOCK TIME DELAY TO BE IGNORED WHILE THE DOOR IS OPEN OR IN THE PROCESS OF CLOSING. IF SOMEONE HITS THE PUSH PLATE OR GIVES THE OPERATE SIGNAL, THE DOOR WILL RECYCLE. IF WE DID NOT IGNORE THE LOCK DELAY AS THE DOOR IS CLOSING IT WOULD BE POSSIBLE THE DOOR WOULD CONTINUE CLOSING EVEN THOUGH THE OPERATE SIGNAL HAD BEEN GIVEN.



OPERATION:

TIMER MODULE FOR LOCK DELAY