



5 ATTACHMENTS


Attachment 1
Breakout Status Wiring for Magic-Swing Operators
(Sheet 1 of 1)

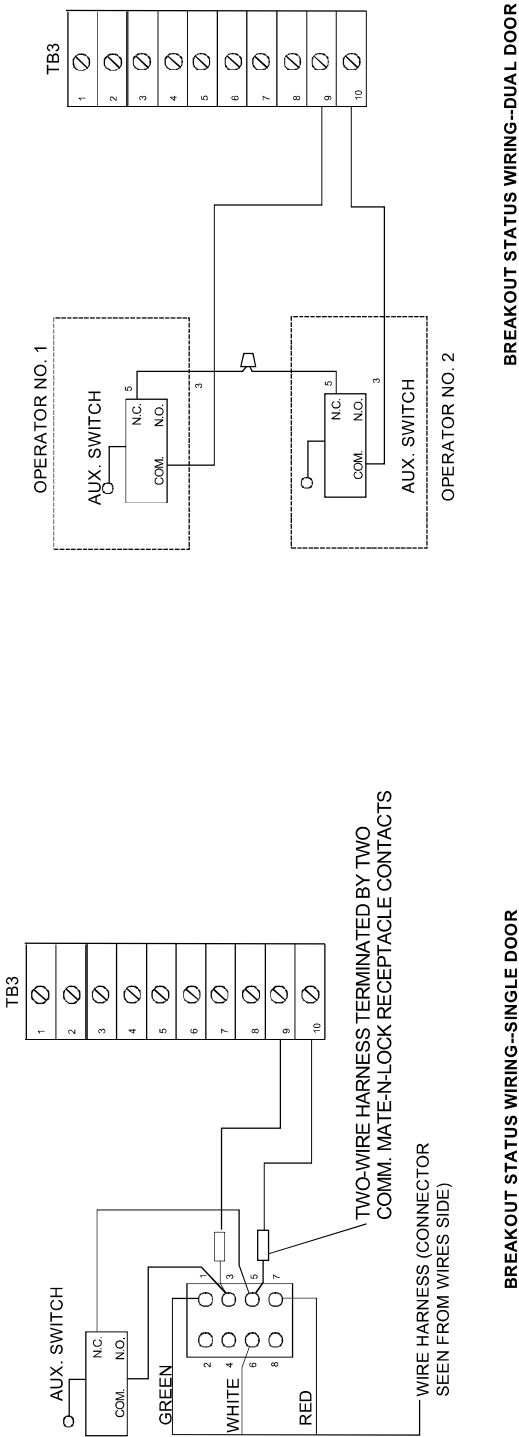

Attachment 2
Magic-Force Wiring Diagram—MC521 PRO
(Sheet 1 of 1)

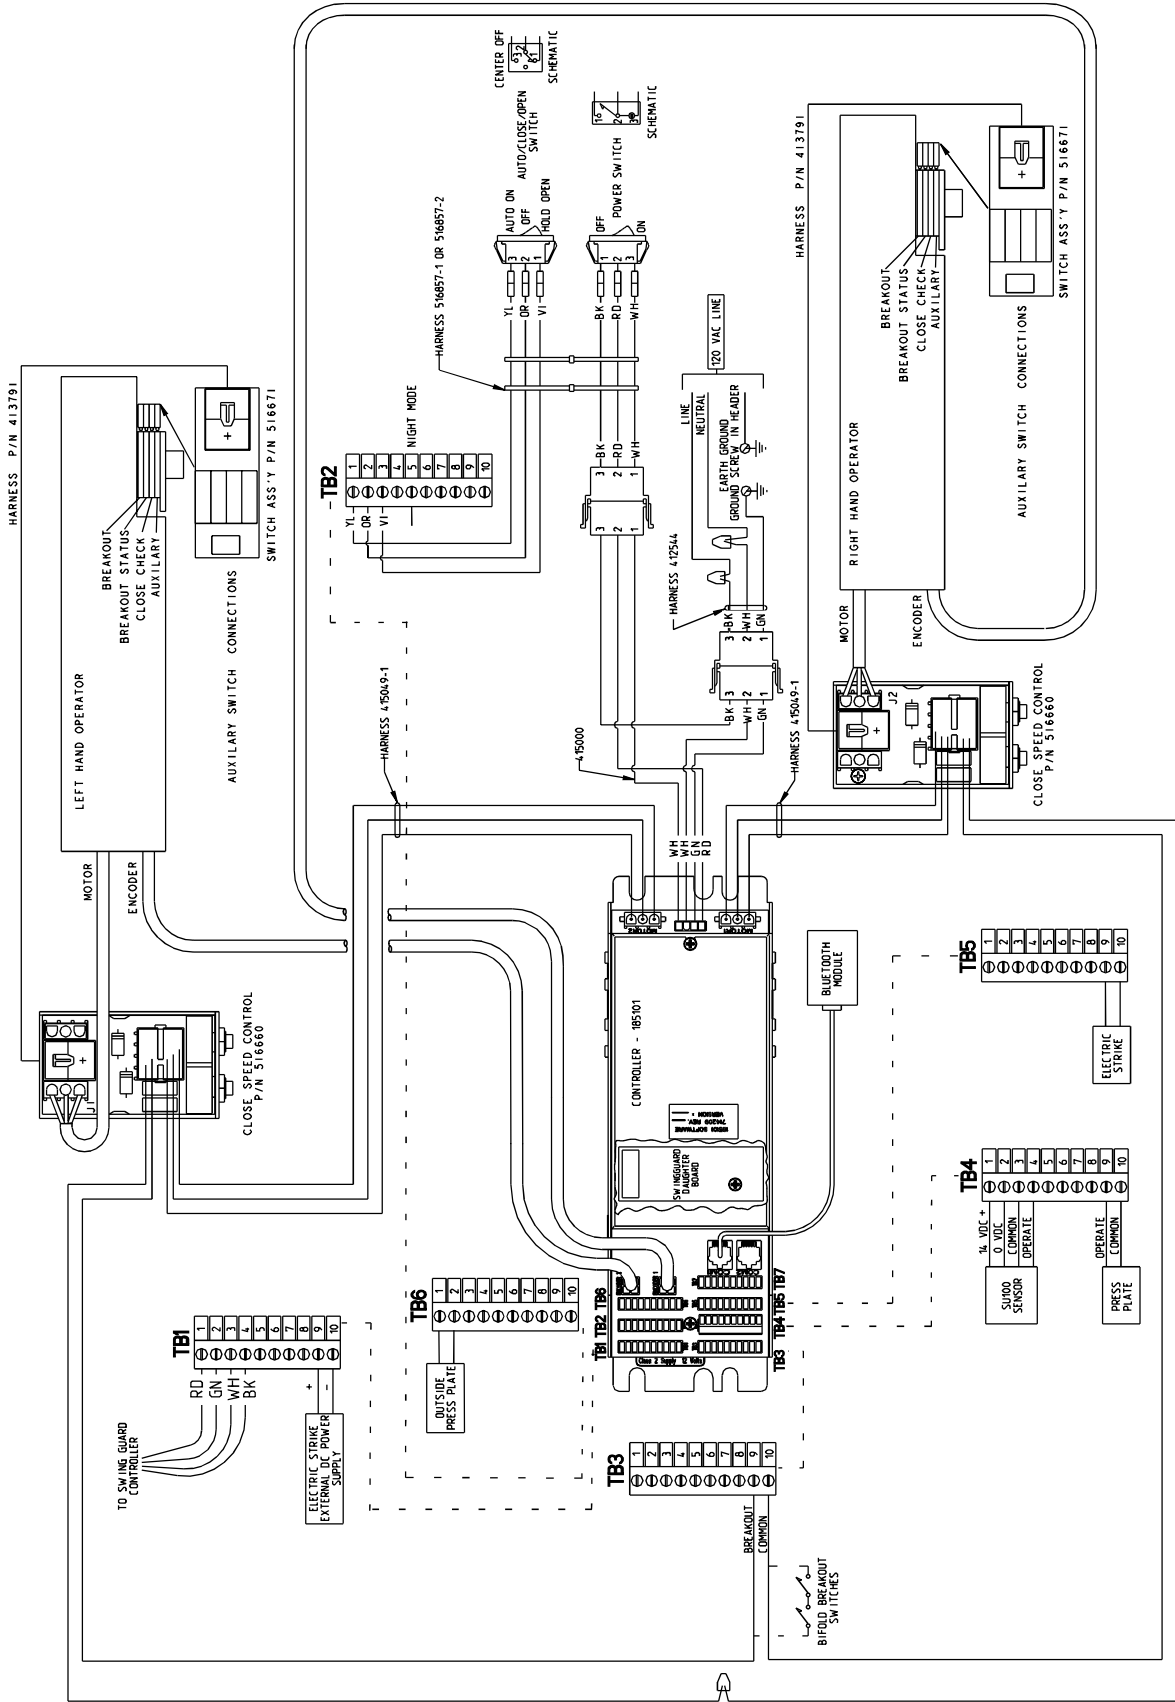

Attachment 3
Magic-ForceWiring Diagram—MC521 PRO With Power Close Option
(Sheet 1 of 1)

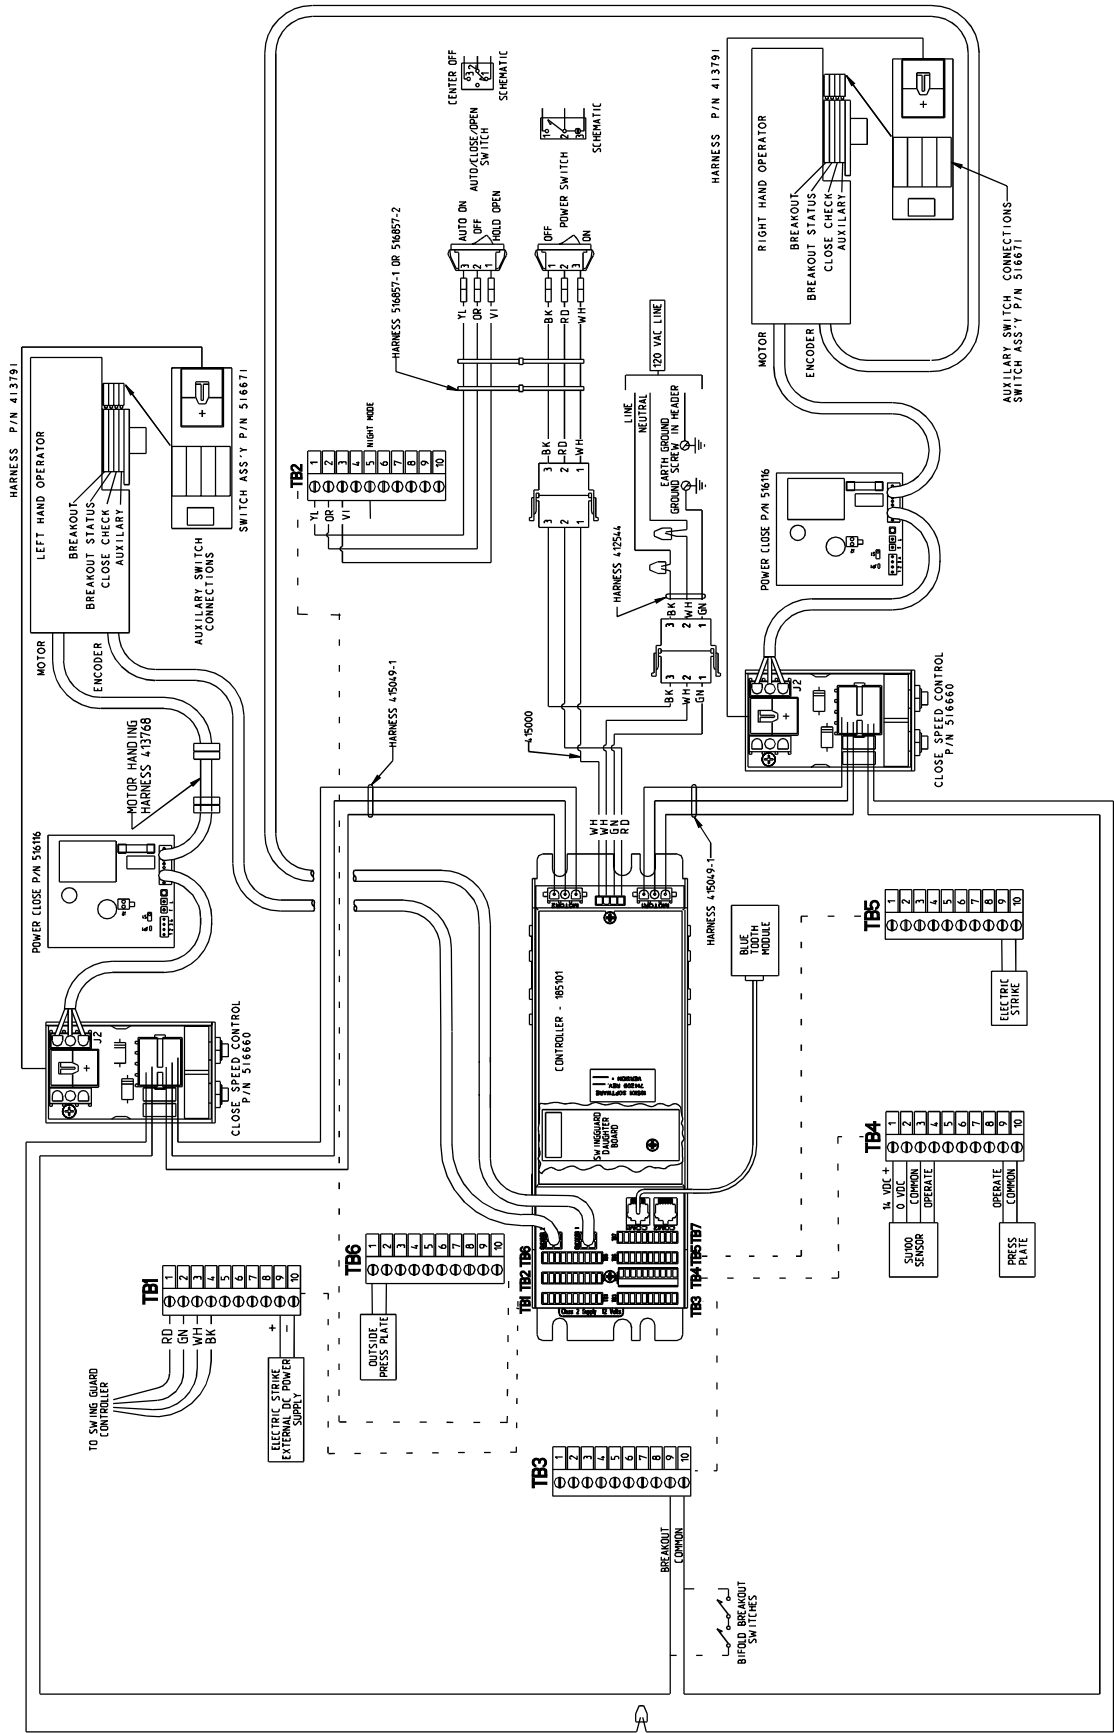


STANLEY®

Magic-Swing Wiring Diagram—MC521 PRO


Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 1 of 14)

DOOR MOUNTED STALL & ACT WITH OVERHEAD PRESENCE
SWING DOOR SINGLE
SAFETY LOGIC - 05

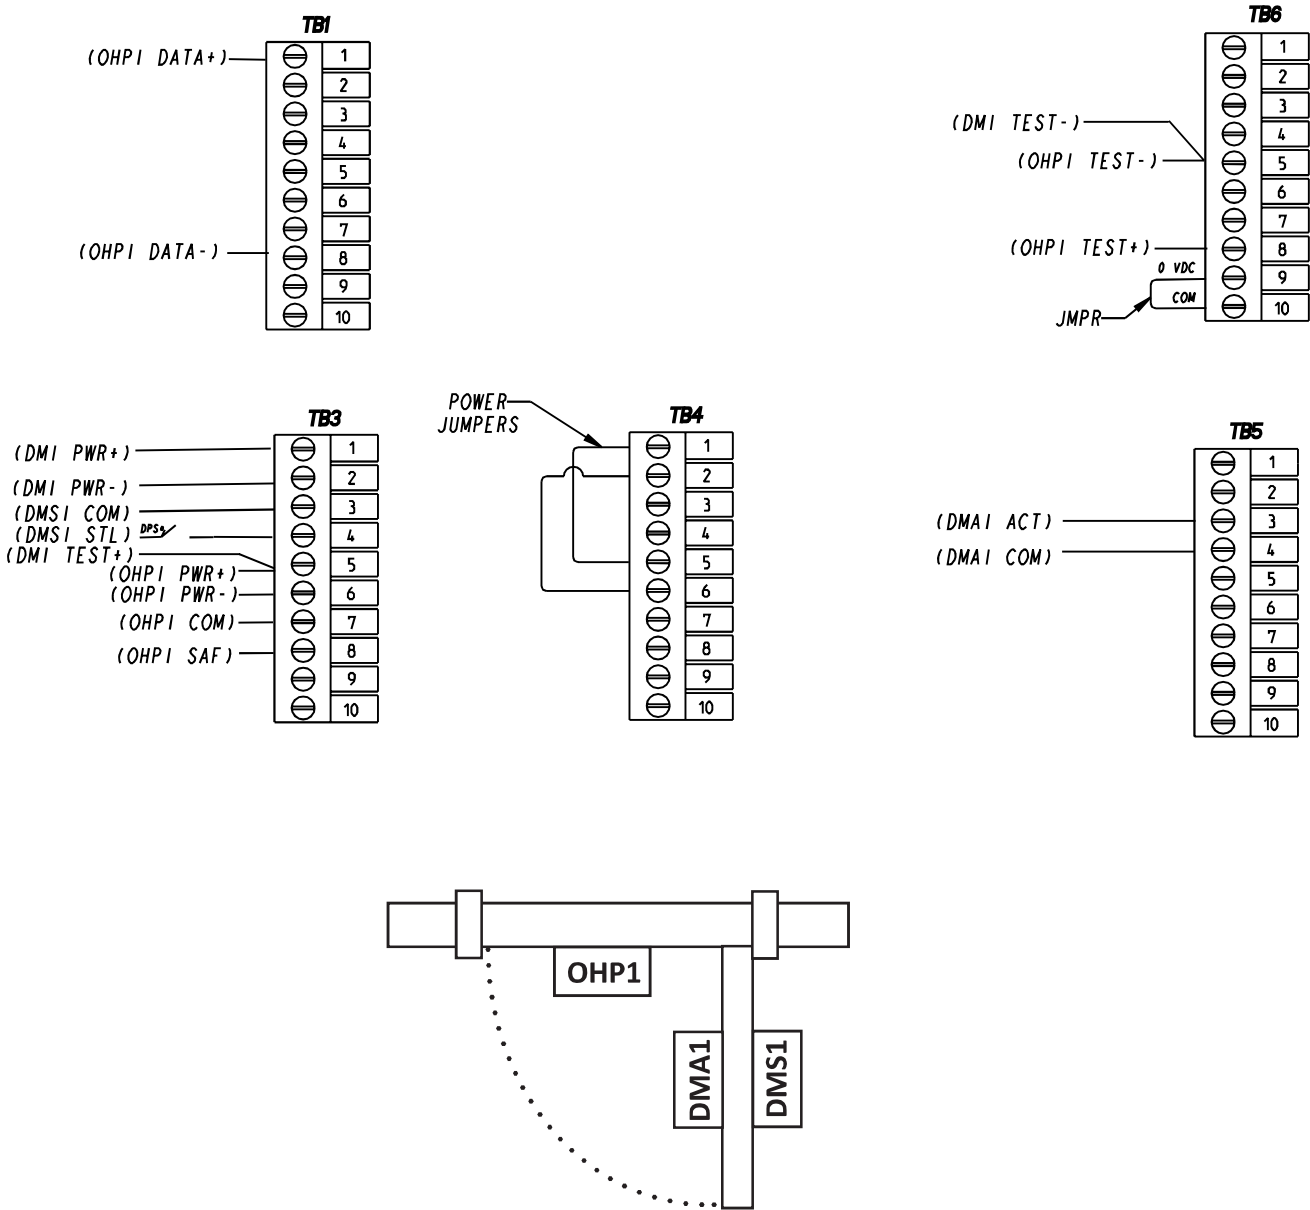

Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 2 of 14)

DOOR MOUNTED STALL & ACT WITH OVERHEAD PRESENCE
SWING DOOR PAIR
SAFETY LOGIC - 05

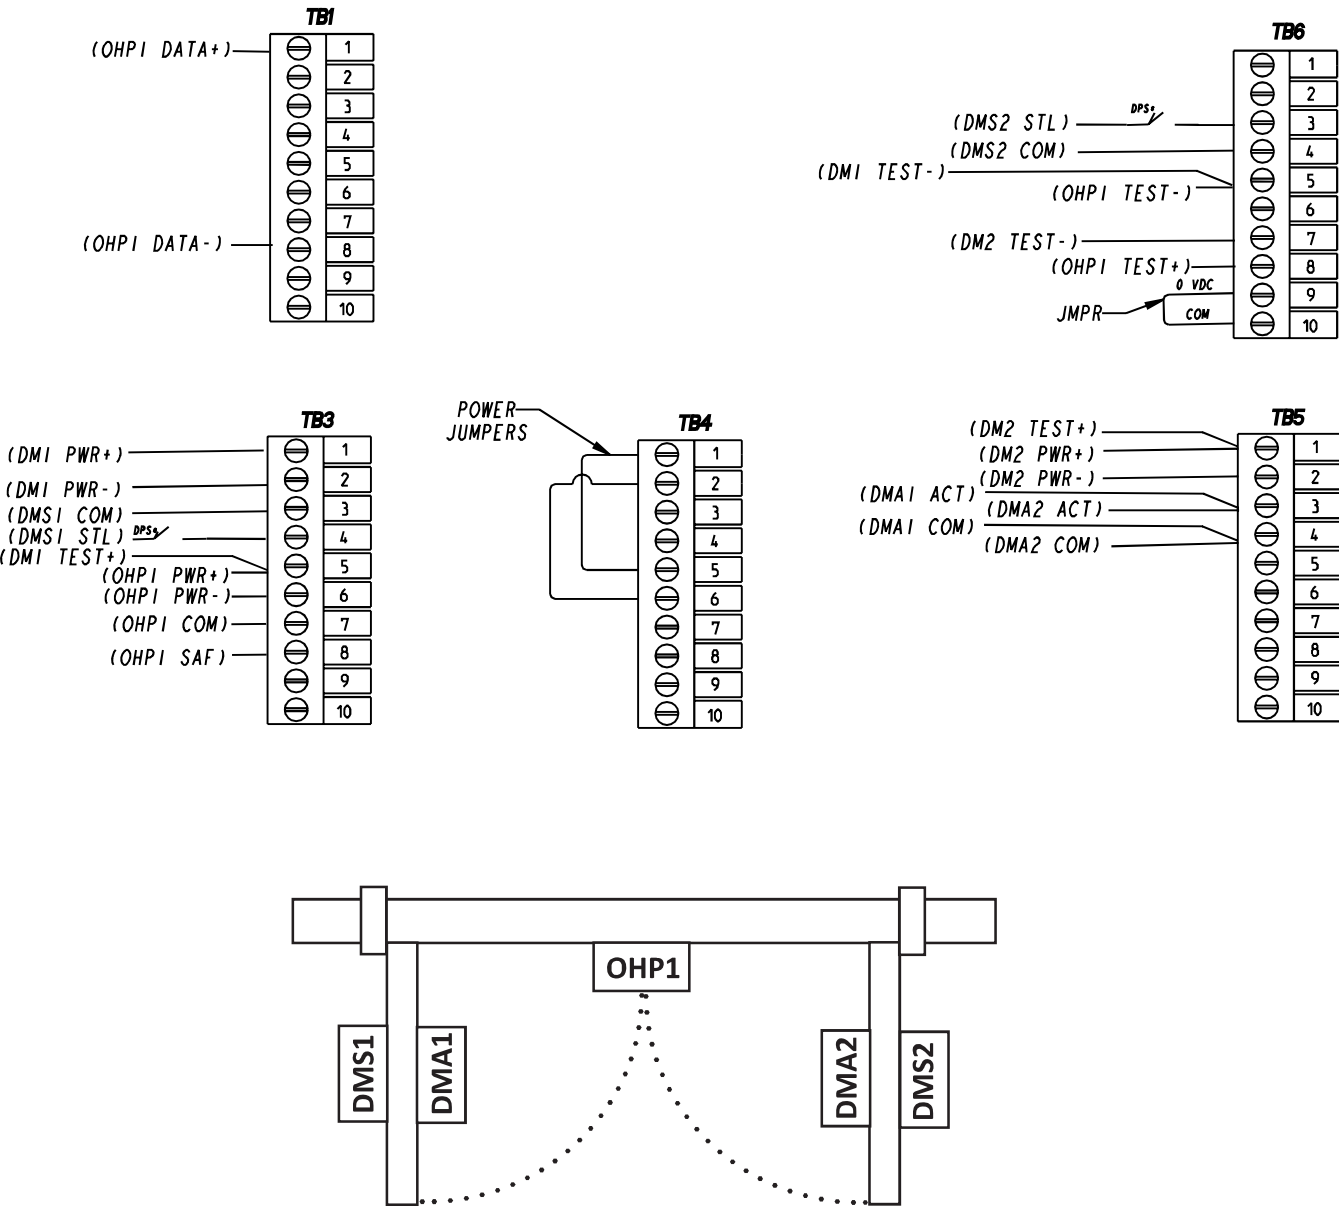


Copyright 2017 Stanley Access Technologies, LLC. All rights reserved. Reproduction in whole or in part without the express written permission of Stanley is prohibited.

03.23.2017



Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 3 of 14)

DOOR MOUNTED STALL & ACT WITH OVERHEAD PRESENCE
SWING DOOR DUAL EGRESS
SAFETY LOGIC - 06

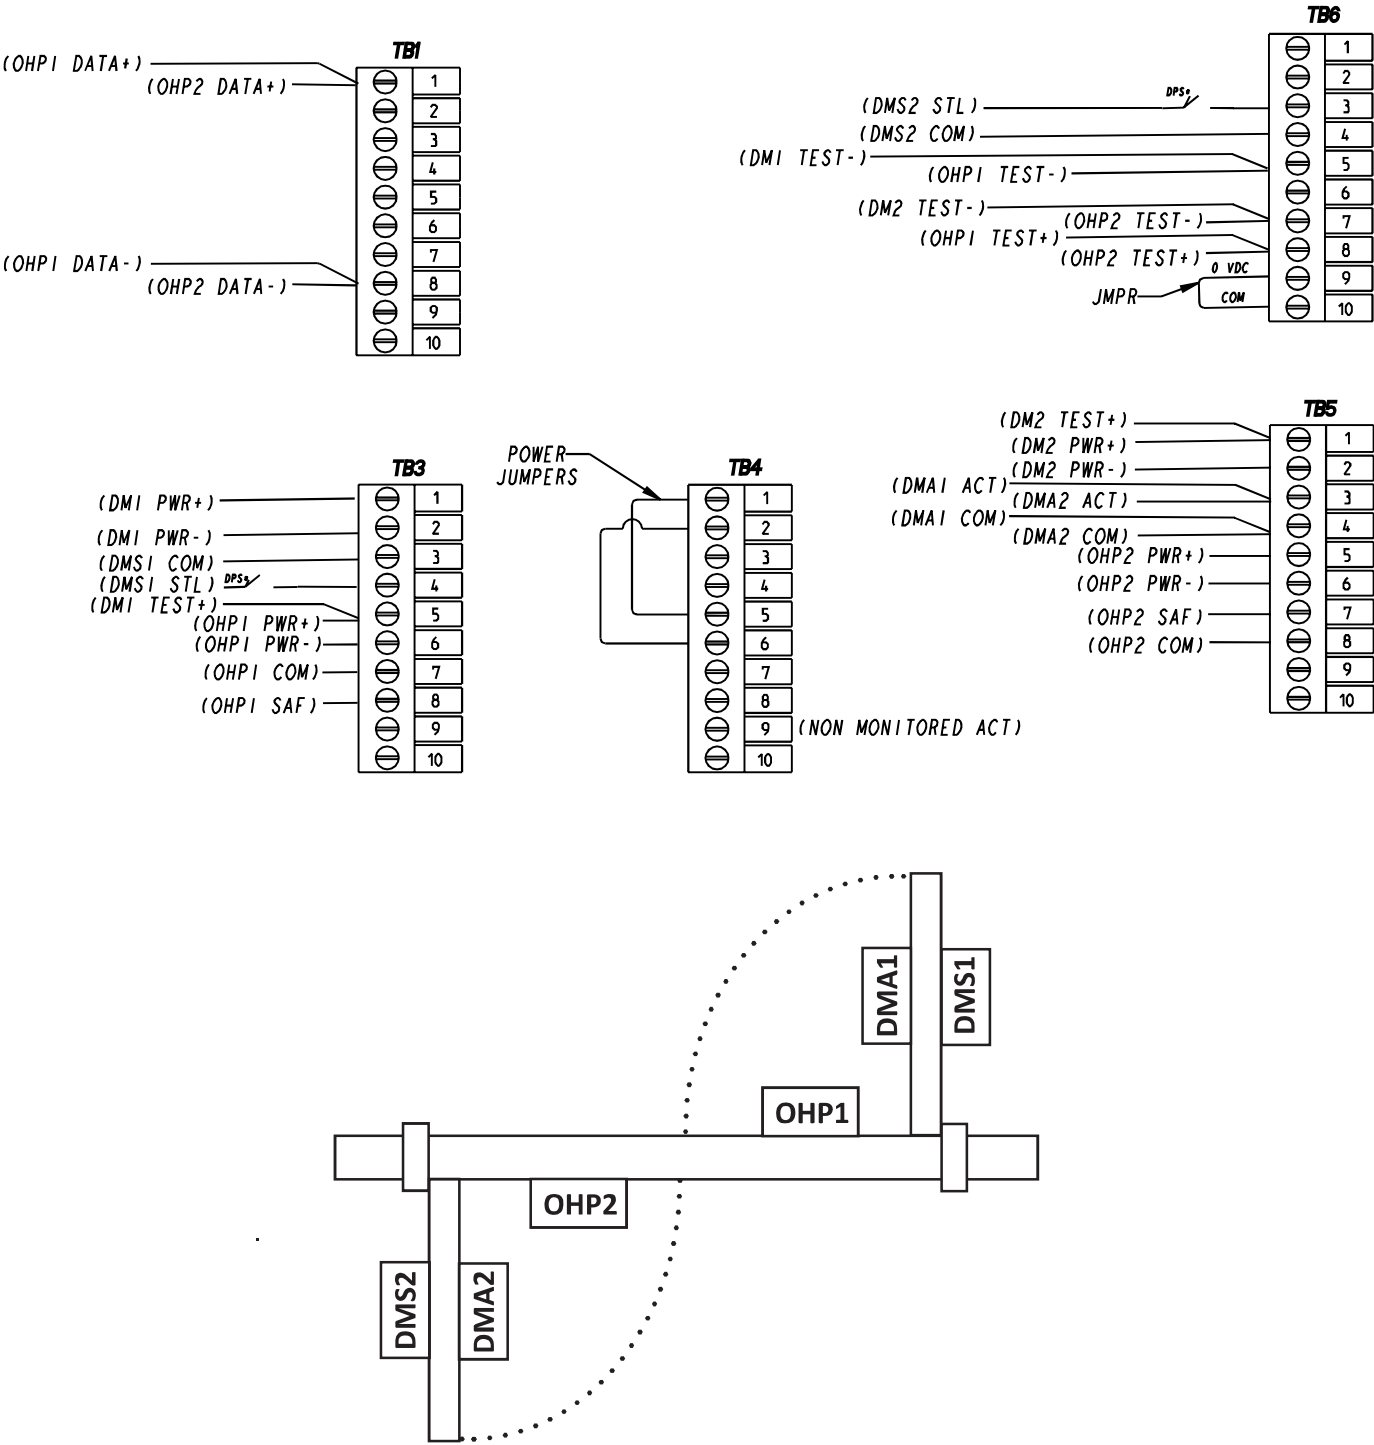






Copyright 2017, Stanley Access Technologies, LLC. All rights reserved. Reproduction in whole or in part without the express written permission of Stanley is prohibited.

Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 4 of 14)

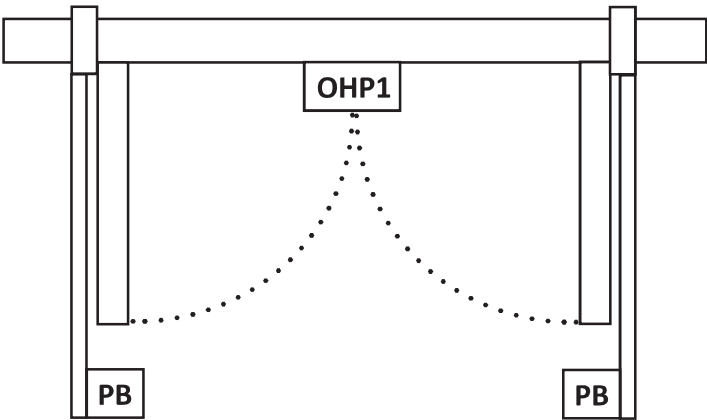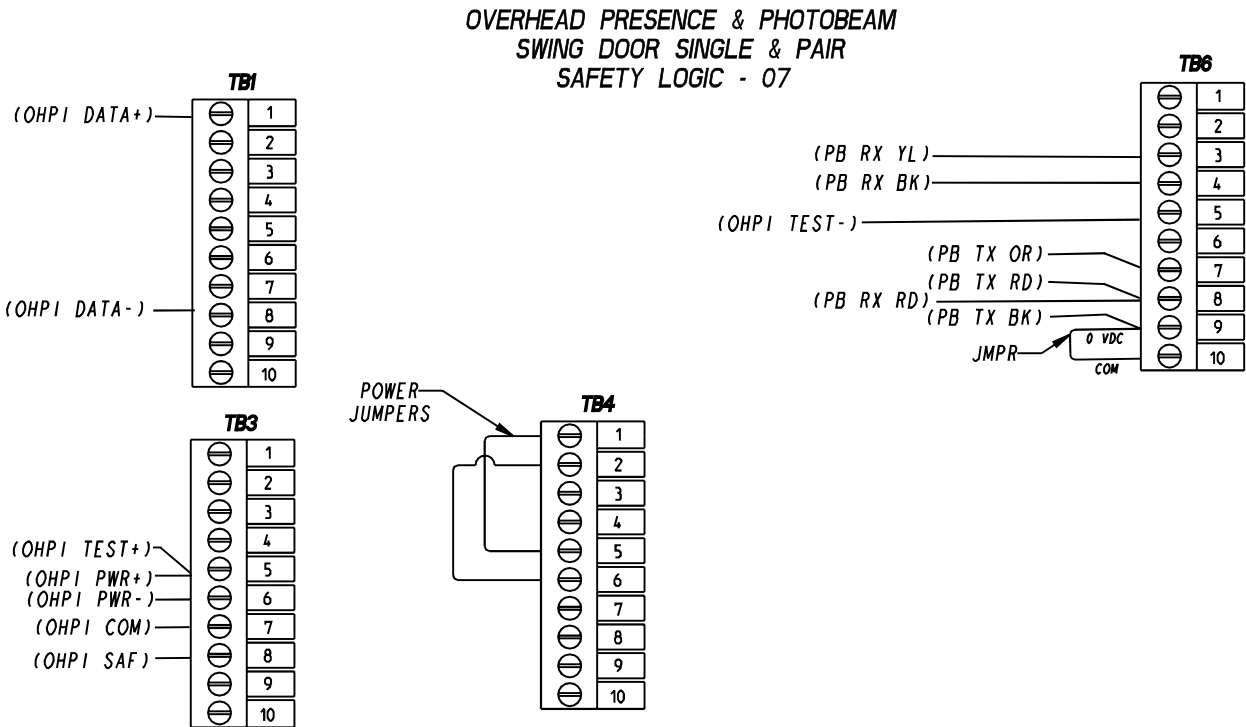



Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 5 of 14)

DOOR MOUNTED ACT
SWING DOOR SINGLE
SAFETY LOGIC - 08

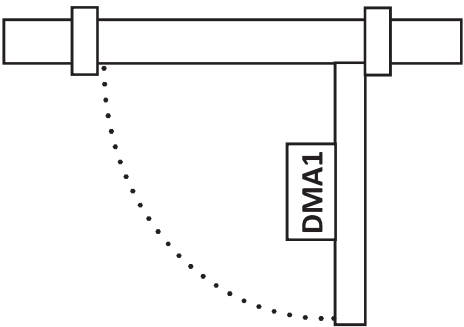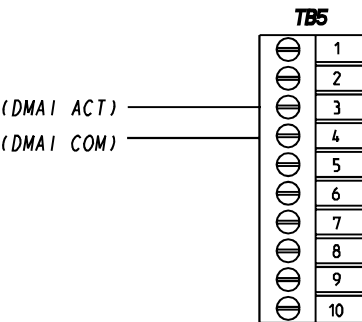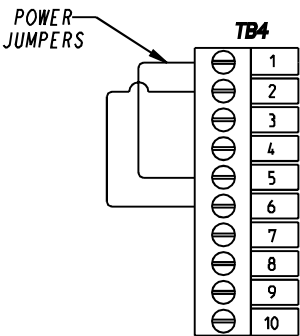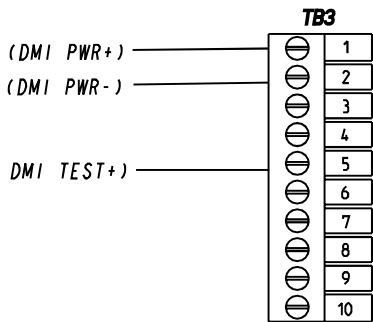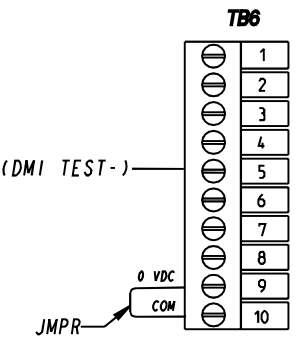





Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 6 of 14)

DOOR MOUNTED ACT
SWING DOOR PAIR
SAFETY LOGIC - 08

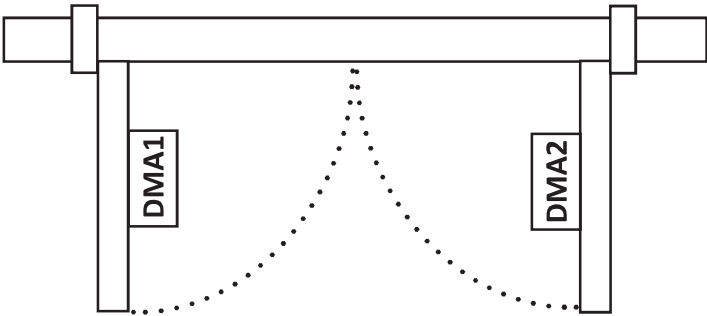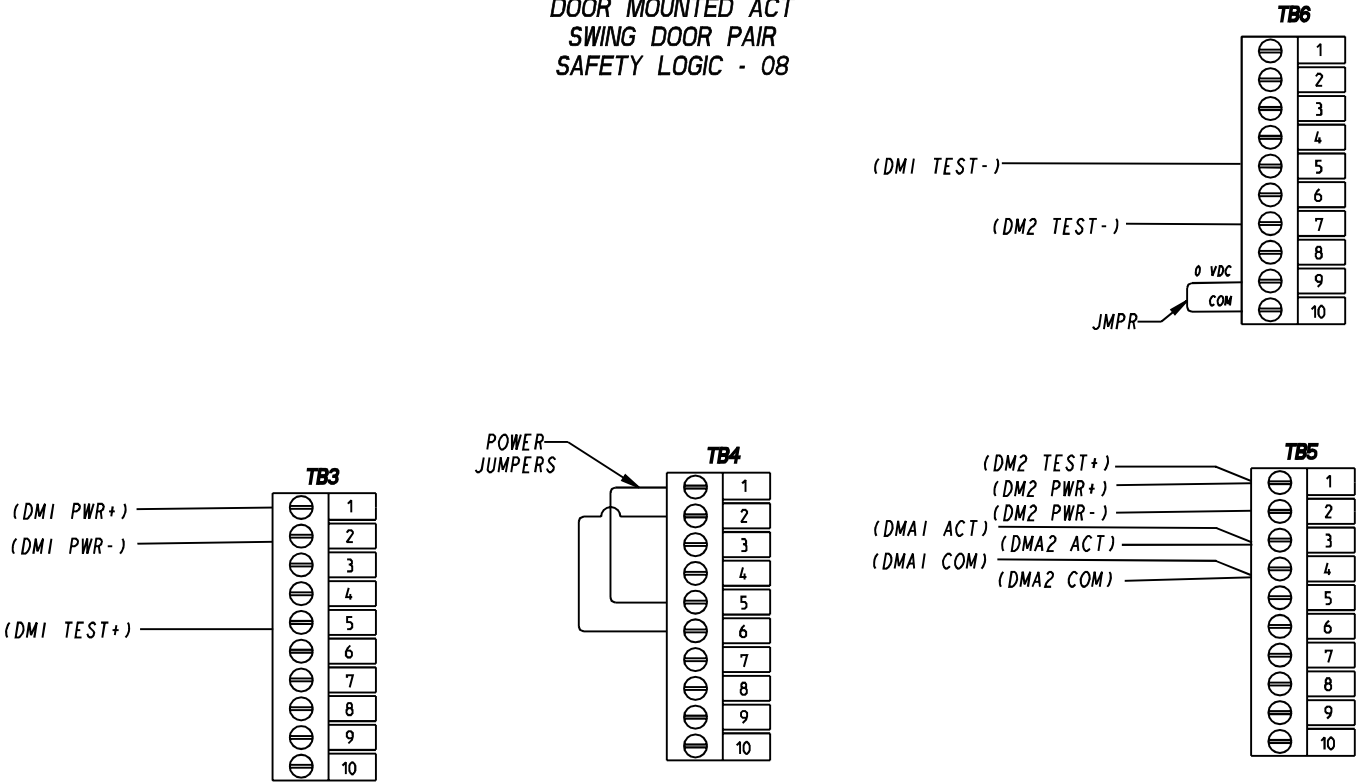






Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 7 of 14)

OVERHEAD PRESENCE
FOLDING DOOR
SAFETY LOGIC - 09

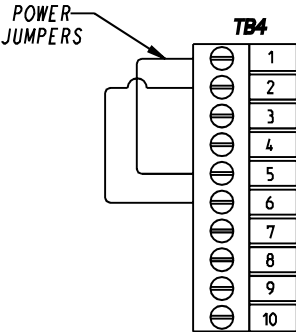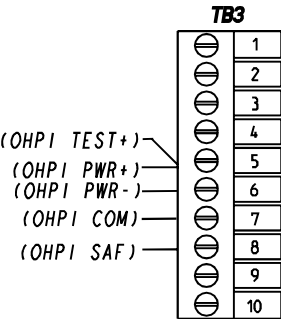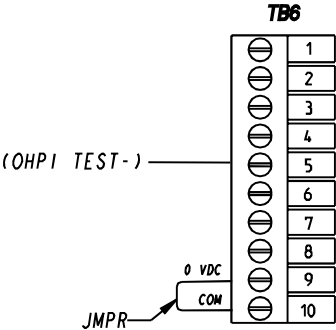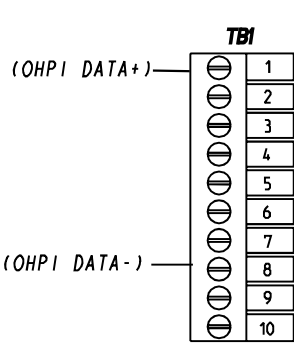



Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 8 of 14)

DOOR MOUNTED STALL & ACT
SWING DOOR SINGLE
SAFETY LOGIC - 10

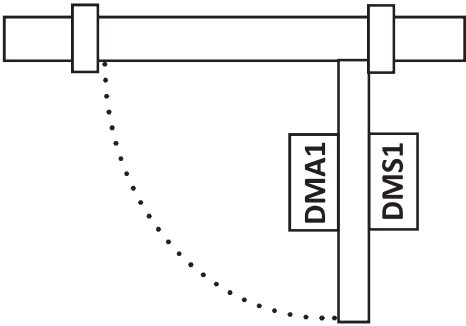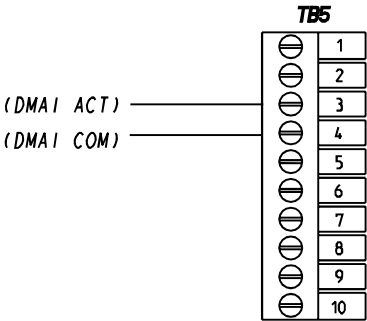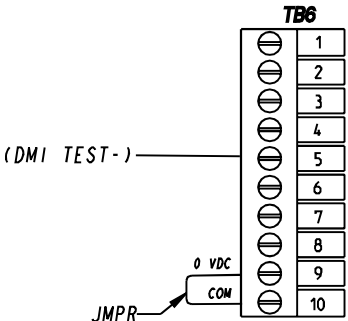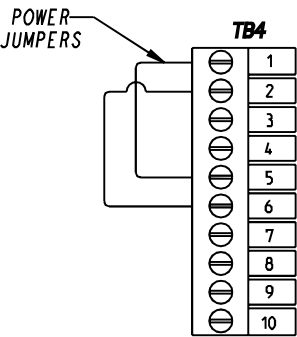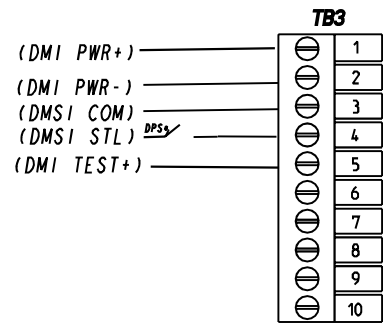


Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 9 of 14)

DOOR MOUNTED STALL & ACT
SWING DOOR PAIR
SAFETY LOGIC - 10

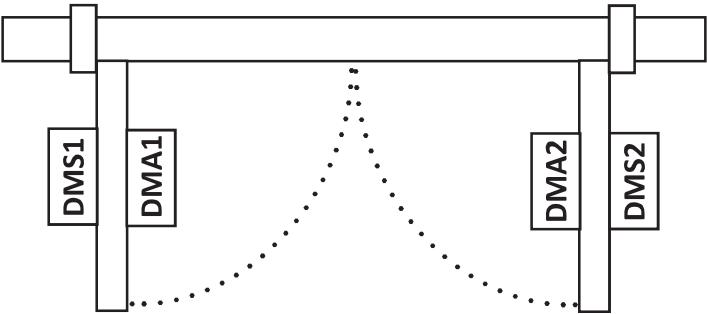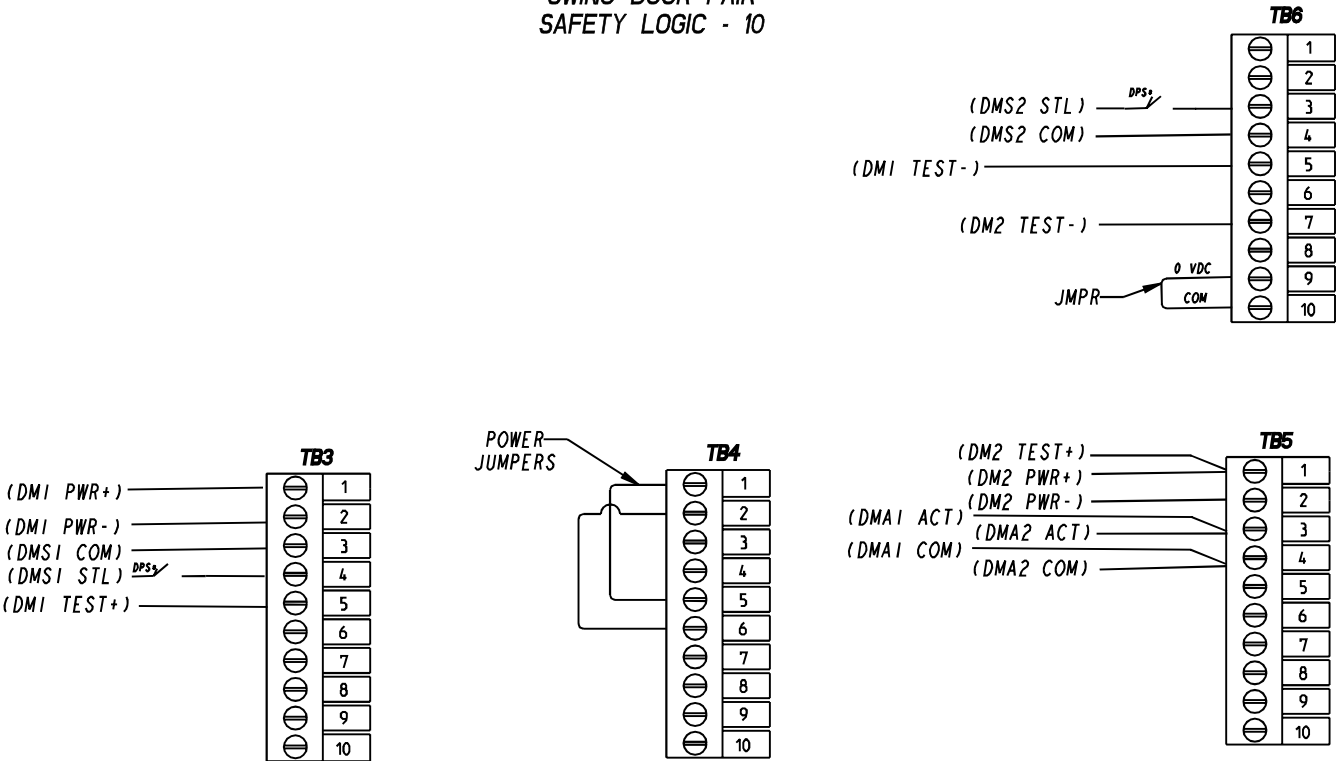


Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 10 of 14)

TWO OVERHEAD PRESENCE
FOLDING DOORS
SAFETY LOGIC - 11

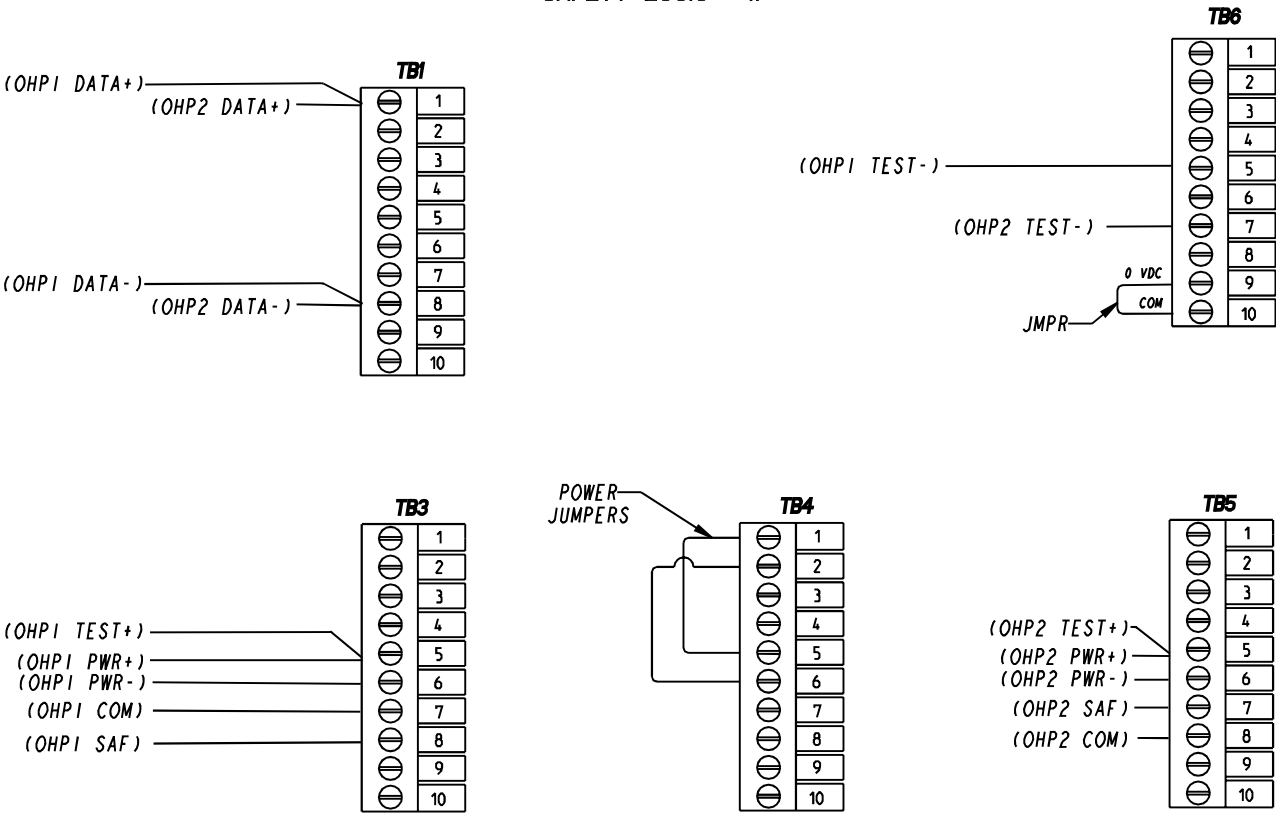



Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 11 of 14)

HUB BASED DOOR MOUNTED STALL & ACT
SWING DOOR SINGLE & PAIR
SAFETY LOGIC - 12

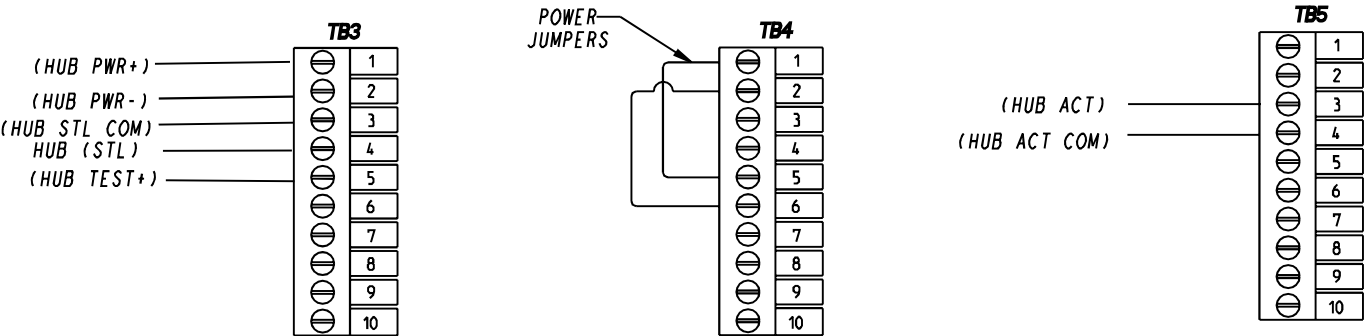







Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 12 of 14)

DOOR MOUNTED STALL WITH OVERHEAD PRESENCE
SWING DOOR SINGLE
SAFETY LOGIC - 14

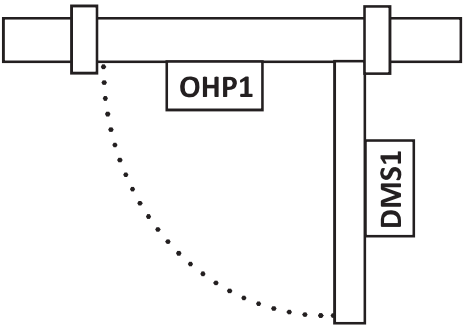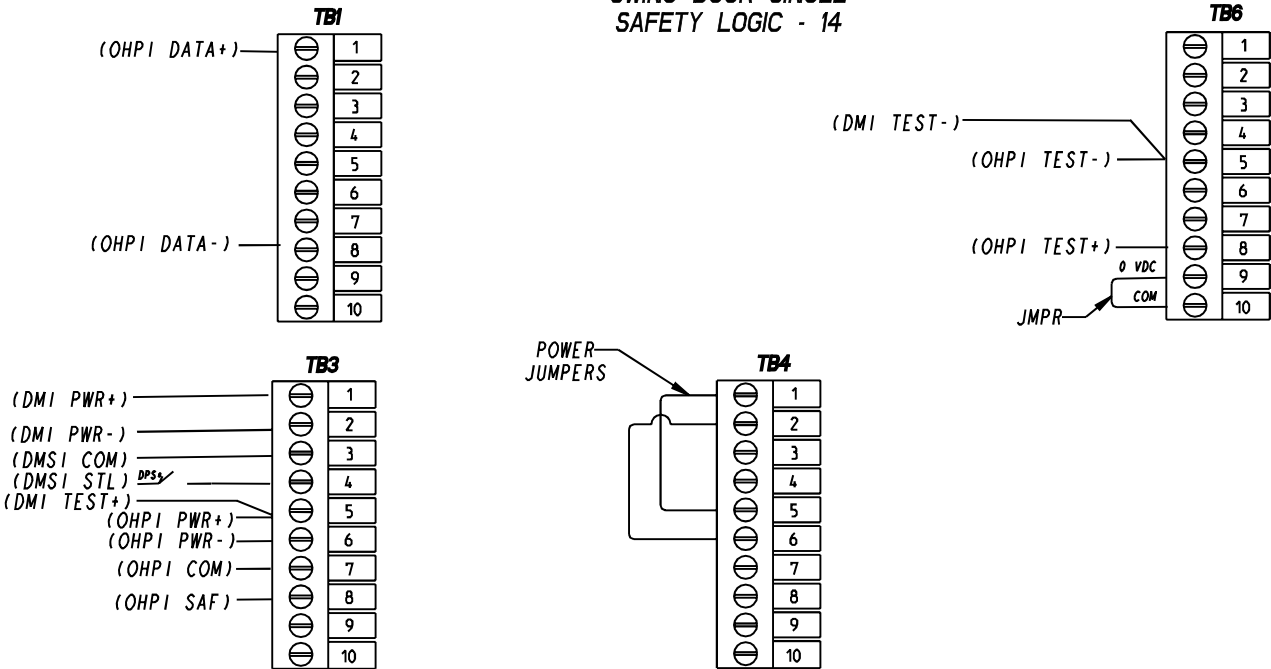


Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 13 of 14)

DOOR MOUNTED STALL WITH OVERHEAD PRESENCE
SWING DOOR PAIR
SAFETY LOGIC - 14

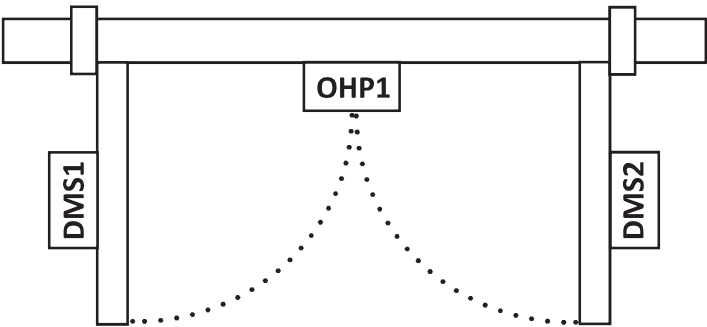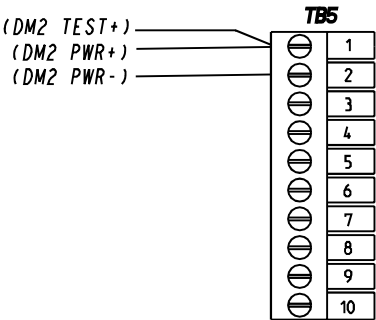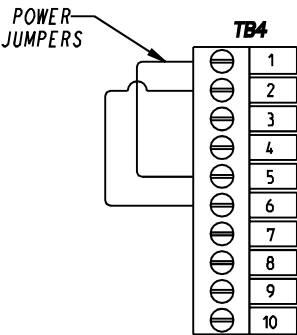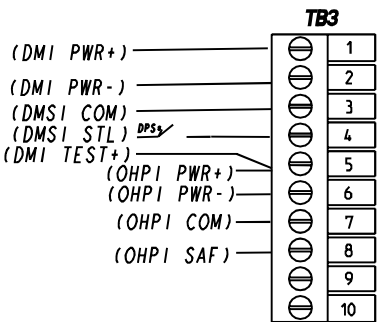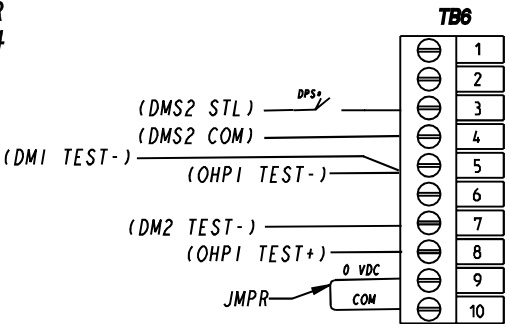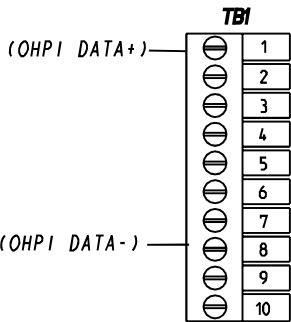


Attachment 5
Monitored Sensors Wiring Diagrams
(Sheet 14 of 14)

DOOR MONITORED STALL WITH TWO OVERHEAD PRESENCE
SWING DOOR DUAL EGRESS
SAFETY LOGIC - 15

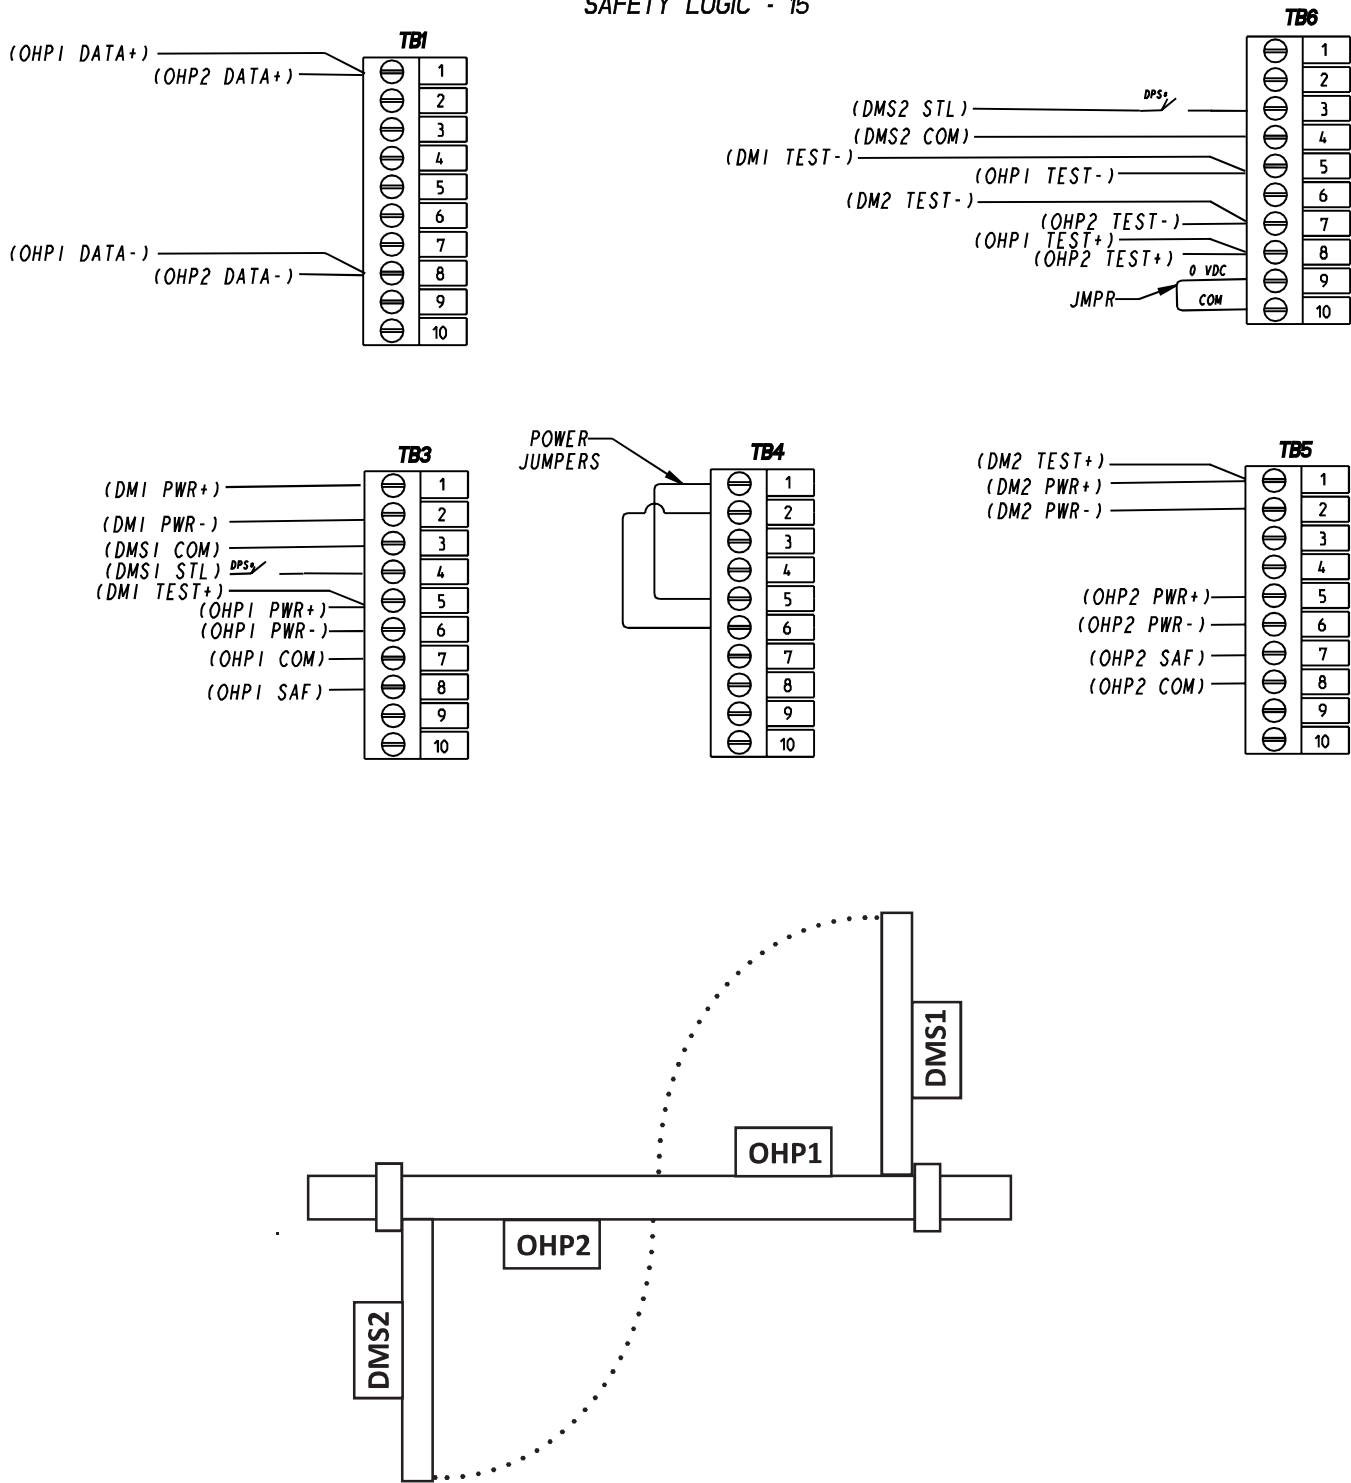


Attachment 6
MC521 PRO Terminal Block Connections—TB1 through TB7
(Sheet 1 of 1)

MC521 PRO INPUTS AND OUTPUTS ASSIGNMENT

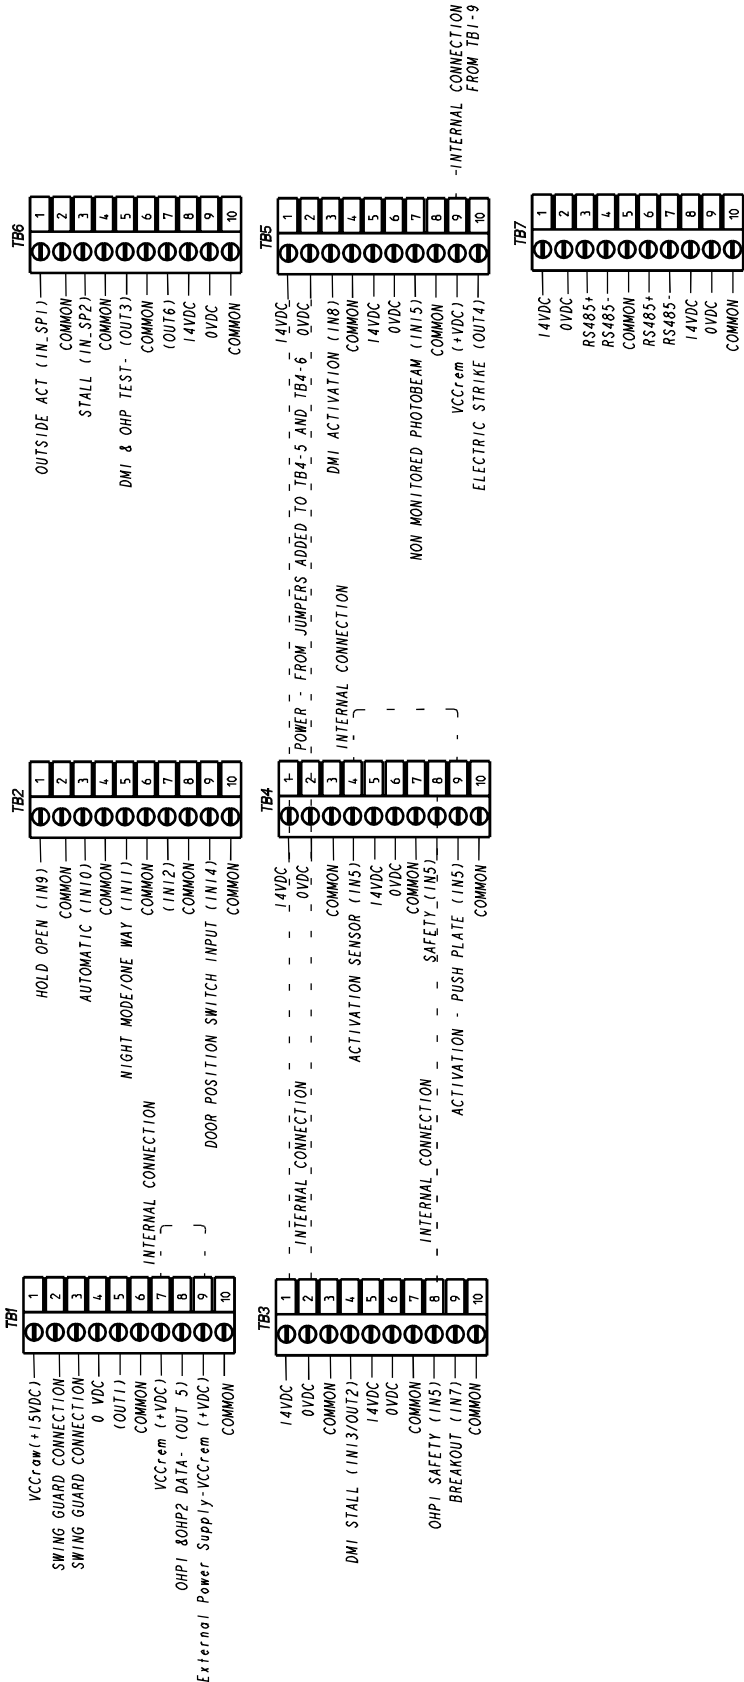

Attachment 7
MC521 PRO Controls and Indicators
(Sheet 1 of 2)

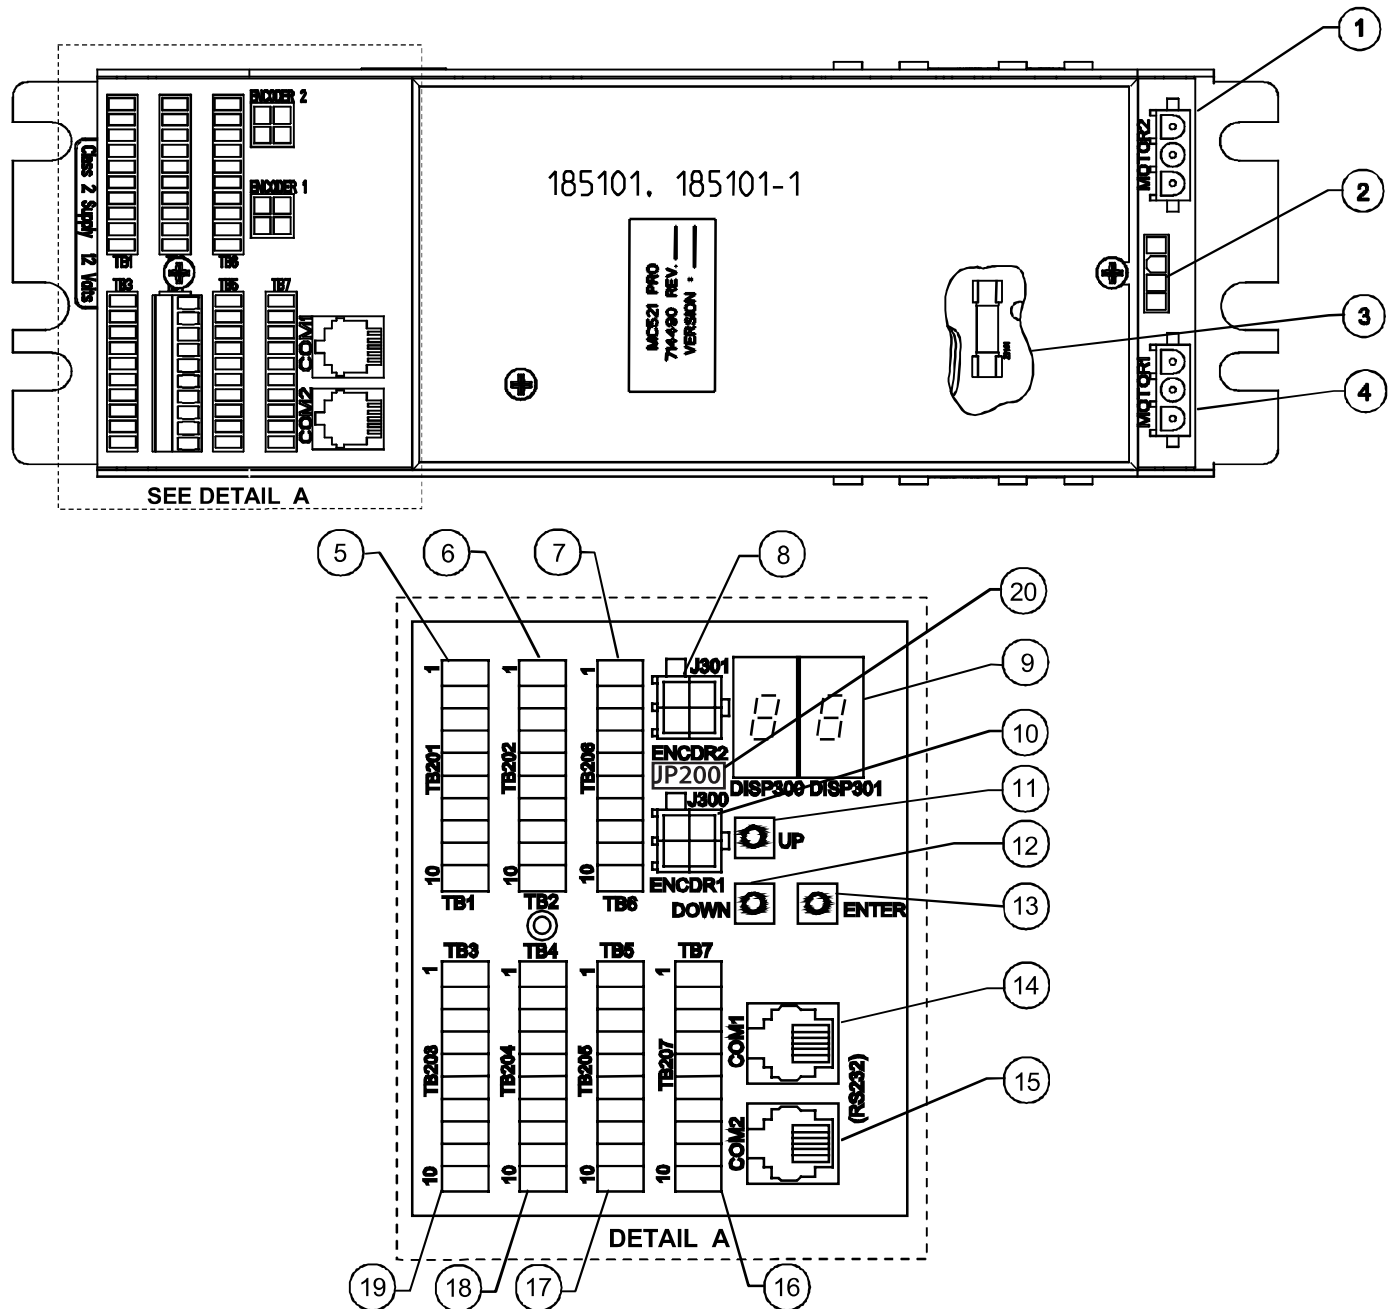

NOTE: See next page for indicators and descriptions